automatic clothes washer
model WWA7050V
OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS WITH YOUR USE AND CARE BOOK

Before operating your washer, READ YOUR USE AND CARE BOOK.

It contains valuable information about sorting and loading, laundry additives, stain removal and IMPORTANT CAUTIONS FOR THE PERSONAL SAFETY OF THOSE USING THIS APPLIANCE.

SORT AND LOAD

- **Remove filter pan.** (The underside of the lid provides a convenient resting place for the filter pan while loading or unloading clothes.)
- **Add sorted laundry to wash basket.** See your Use and Care Book for sorting details.
- **A typical full load:**

3 double sheets	4 T-shirts
3 long sleeve shirts	2 pair of trousers
3 bath towels	7 wash cloths
4 standard size pillow cases	5 handkerchiefs

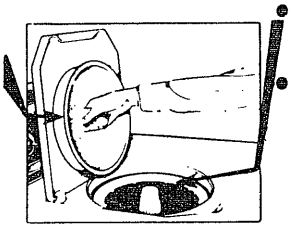

- Clothes level should be below the clothes retaining ring.
- **Replace Filter Pan and add measured amount of detergent as recommended on detergent package.** NOTE: Because of variations in contents, some granular detergents may be difficult to dissolve. If this is a problem:
  - – After loading the clothes, put the detergent in the wash basket next to the agitator, or,
  - – Use a liquid detergent.
- **For use of Bleach Dispenser** see back page. For use of fabric softener and other laundry aids, see your Use and Care Book.

SET THE CONTROLS Refer to CONTROLS SETTING GUIDE below

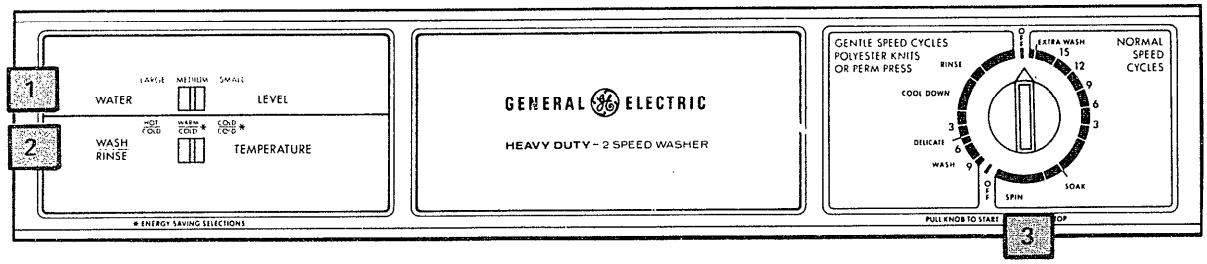

Close lid and set controls as follows:

Lid must be closed for washer to operate. Washer will fill but will not agitate or spin with lid open.

1 Select WATER LEVEL:

Load Size Setting	Clothes Load Size
Small	Washer is less than ½ full of clothes.
Medium	Washer is 1/2 to 2/3 full.
Large	Washer is more than 2/3 full.

2 Select WASH/RINSE TEMPERATURE.

3 Push Cycle Selector Knob in and turn clockwise to your selected wash cycle. See wash cycles on back page.

The NORMAL SPEED CYCLES automatically provide normal wash speed and fast spin.

The GENTLE SPEED CYCLES automatically provide gentle wash speed and slow spin.



- **Pull Cycle Selector Knob out** to start washer.

The wash cycle setting can be changed at any time. Push in the Cycle Selector knob to stop the washer and reset to the new position.

CONTROLS SETTING GUIDE

	COTTONS & LINENS				PERMANENT PRESS POLYESTER KNITS SYNTHETICS & BLENDS		SPECIAL
	Work clothes dungarees, etc. with heavy soil	Work clothes dungarees, etc. with normal soil	White or Colorfast	Bright Colors	Heavy or Oily Soil	Normal or Light Soil	Delicates, Sheers, or Knits
*WASH/RINSE TEMPERATURE	Hot/Cold	Hot/Cold or Warm/Cold	Hot/Cold or Warm/Cold	Warm/Cold	Hot/Cold	Warm/Cold	Warm/Cold or Cold/Cold
CYCLE	NORMAL SPEED				GENTLE SPEED		
**CYCLE SELECTOR SETTING	Extra Wash (19 Min.)	15 Min.	12 Min.	9 Min.	9 Min.	6 Min.	Delicate Setting (5 Min.)

*The cooler wash settings (not below 80°F./27°C.) will save energy. See your Use and Care Book for more complete instructions.

**The wash times suggested here apply to laundering an average weight of clothes under typical home conditions. You may find that some adjustment in these times is desirable.

UC17 49-9364

HOW TO USE THE BLEACH DISPENSER

The Bleach Dispenser is designed for use with liquid bleach only! If you prefer to use powdered bleach, pour it into the filter pan, NOT into the bleach dispenser.

- Do NOT overflow – Avoid splashing. Undiluted bleach will cause fabric damage.
- Pour measured amount of liquid bleach directly into the BLEACH DISPENSER.

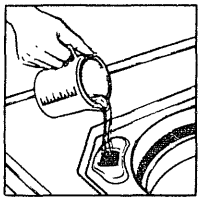

- Maximum recommended amount of liquid bleach . . .
  - Full wash: 1 1/4 cup (310 ml) liquid
  - Small wash: 2/3 cup (170 ml) liquid

NEVER POUR LIQUID BLEACH DIRECTLY ONTO CLOTHES

WHAT HAPPENS IN EACH CYCLE

All times are approximate.

NORMAL SPEED CYCLES

Provides longer washing time for most cottons, linens, work and play clothes.

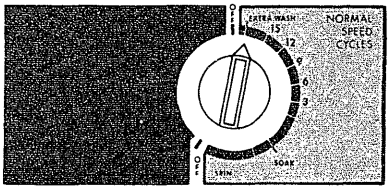

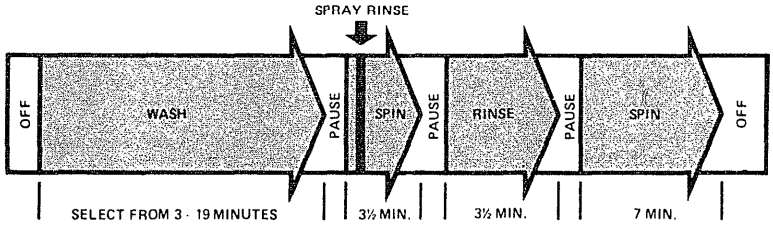

- TOTAL CYCLE TIME: Varies from 19 to 35 minutes plus fill time depending on selected wash time.

GENTLE SPEED CYCLES

For Polyester Knits, delicates and Permanent Press Laundering. An extended cool-down spray rinse is provided to minimize the setting of wrinkles.

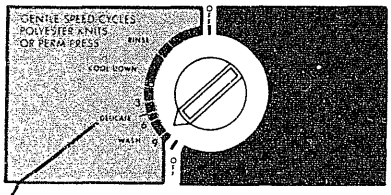

DELICATE setting (5 min. wash time) For delicates, sheers and some knits where a shorter wash time is desired.

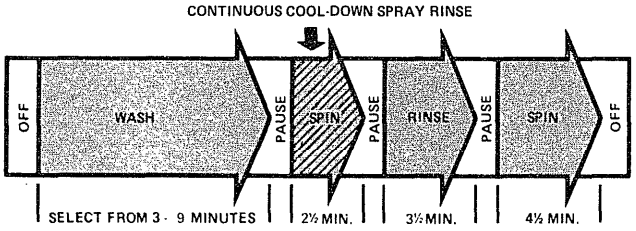

- TOTAL CYCLE TIME: Varies from 16 to 22 minutes plus fill time depending on selected wash time.

SOAK CYCLE

May be used with most soaking aids to loosen deeply embedded soils or stains.

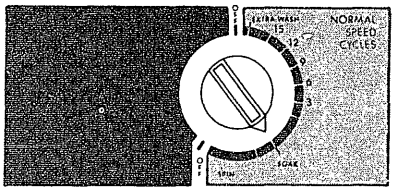

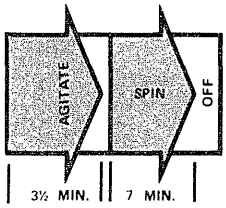

- TOTAL CYCLE TIME: 11 minutes plus fill time.

- Cold water will be provided automatically in the SOAK CYCLE.
- If a Hot or Warm soak is desired, set Wash Temp Switch and turn Cycle Selector to "EXTRA WASH".
- After washer fills and begins to agitate, push in Cycle Selector knob and turn to "SOAK".
- Pull out Cycle Selector knob to complete the cycle.

For and EXTENDED SOAK

- Allow washer to fill and agitate for a few minutes to dissolve soaking agent, then—
- Push in Cycle Selector knob to stop washer and allow to soak for as long as desired.
- After desired soak period, pull out Cycle Selector knob to complete the cycle.

BEFORE YOU CALL FOR SERVICE . . . Check the TROUBLE-SHOOTING GUIDE on the back cover of your USE AND CARE BOOK. It lists many minor causes of operating problems that you can correct yourself and may save you an unnecessary service call.

GENERAL ELECTRIC COMPANY
LOUISVILLE, KENTUCKY 40225

Part No. 141A7449P354 | 10-79

GENERAL ELECTRIC

WWA7050V
Pub. No. 49-9364